



# System Set

- 1 Elevator Control System Overview
  - 1.1 System Overview
  - 1.2 System Settings
  - 1.3 System Condition
  - 1.4 System Usage Procedures
- 2 Usage Description for Products related to Elevator Cabin
  - 2.1 Elevator IC Card Controller Installation
  - 2.2 Enabling IC Card Control and setting up of floor access with controlled or uncontrolled function
    - 2.2.1 COP IC Card Control Enable
    - 2.2.2 Controlled or uncontrolled IC Card Control Function Enable for Individual Floor
  - 2.3 The Use of IC Card Control Card
    - 2.3.1 Jump Settings

# et e h a d g











Front View



Back View

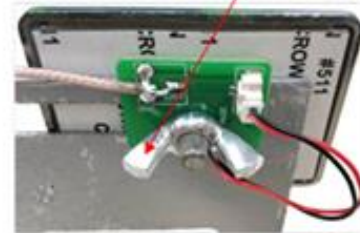

Installation Instruction

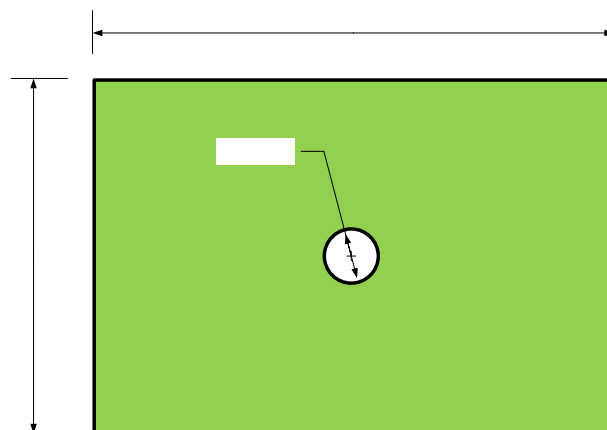



---

---

---



---


--	--























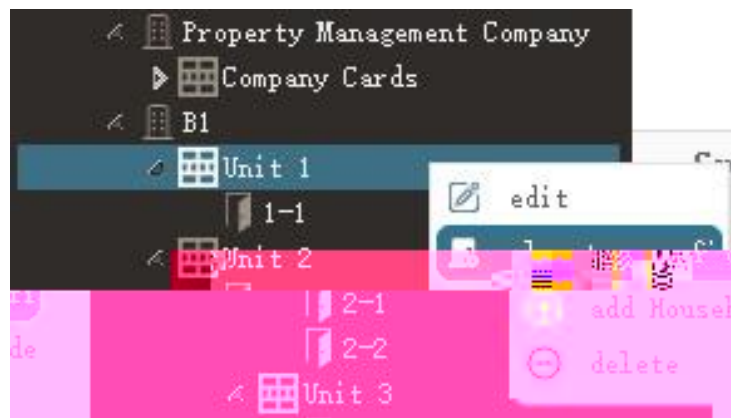

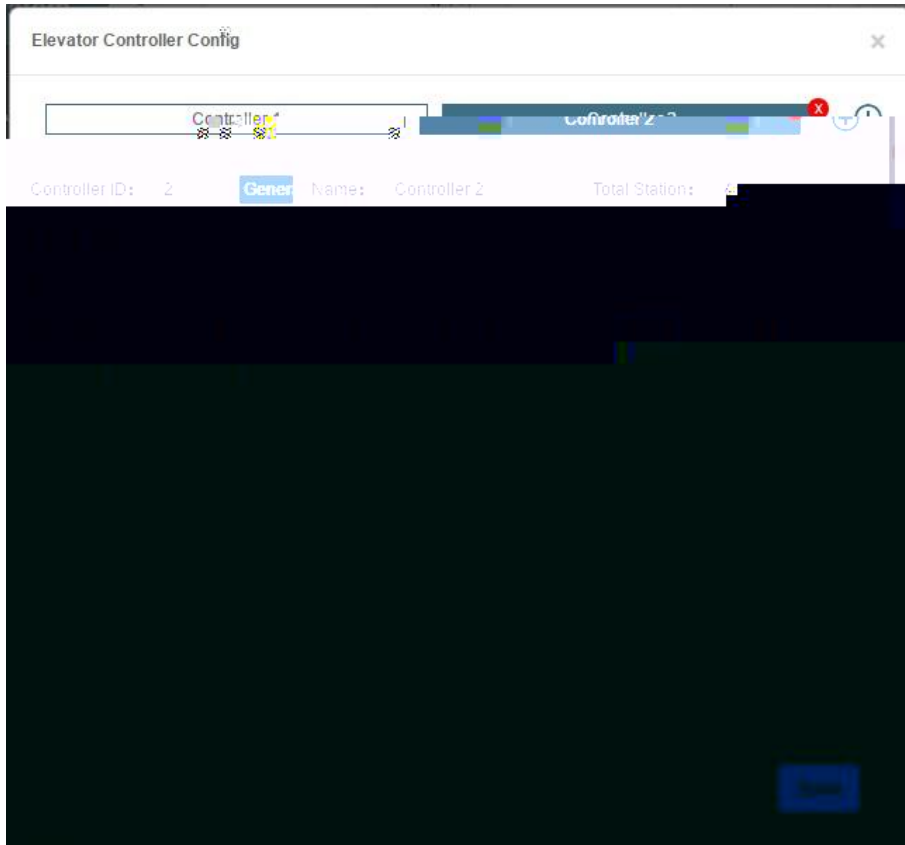

IC Card System v4 - admin(Super Administrator)

IC Card System

Overdue: 1      Mobile: 0430708      Arrearage:      NEW READ

Overdue: 1      Normal: 5      staff: 4      admin: 49

Payment      Handle

Card ID	Owner	Mobile	Householder	Remain	Card Type	Manipulation
CA62BD33	Allen	0430708	Vanke City-B1-Unit 2-2-1	0 Times	User Card	Loss Delete

Searching Information

Card ID	Owner	Mobile	Householder	Remain	Card Type	Manipulation
CA62BD33	Allen	0430708	Vanke City-B1-Unit 2-2-1	0 Times	User Card	Loss Delete







