 




Chapter 1 Elevator Group Control System Introduction

1.1 On Duty Mode

1.2 Off Duty Mode


1.3 Balance Mode

1.4 Standby Mode

Note that if the elevator is faulty, or in Attendant mode, Inspection mode, Parking mode, Fireman mode, Independent mode, then it will be removed from the Group control bank.

The operation and setting of each elevator in the group control bank shall be referred to SJT-WVF5 elevator control system testing and commissioning manual.

2.2 LCD Display Flowchart and Description

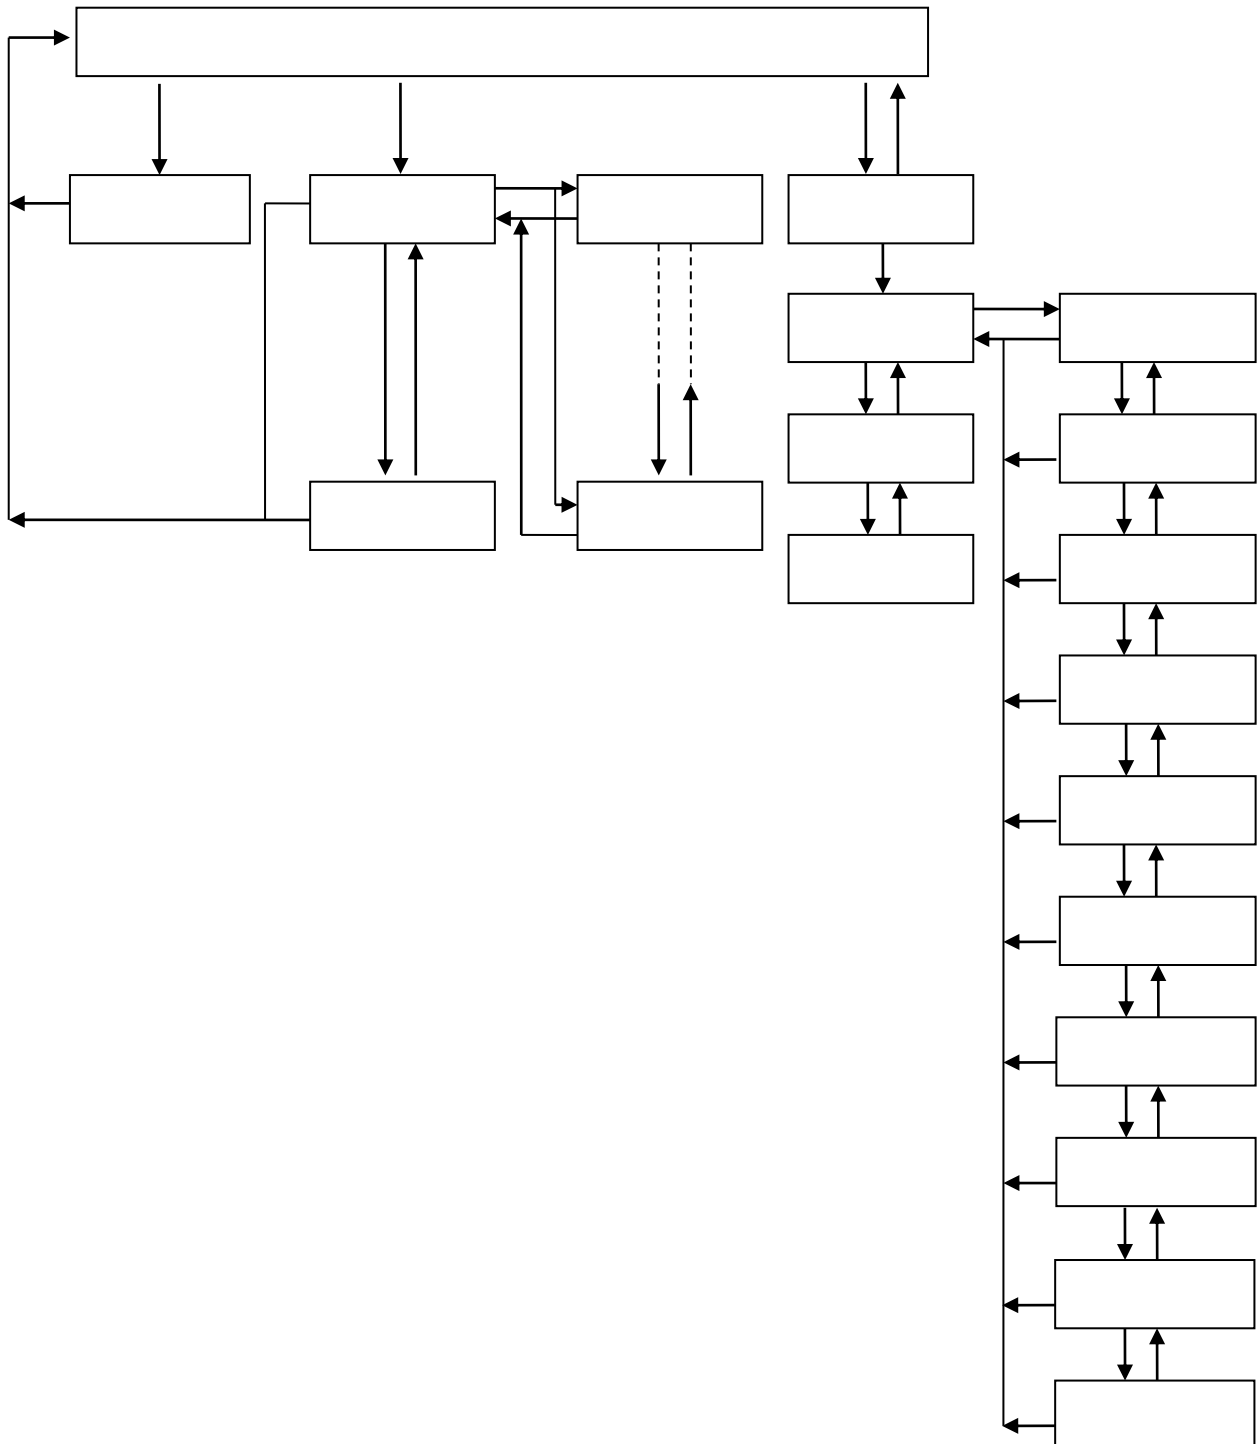

2.3 LCD Display Main Menu Description

2.4 Group Control Status and Communication

2.7 Password Setting

2.8 Save Parameter



2.9 Change Password

2.10 General Parameter Settings

2.10.1 Group able set


2.10.3 Mode Select

2.10.5 Set On Duty Time / Off Duty Time



2.11 Setting requirement for Group Control versus elevator numbers (A, B, C, ...)

Group Control Manual: Additional Description (2007-4-7)

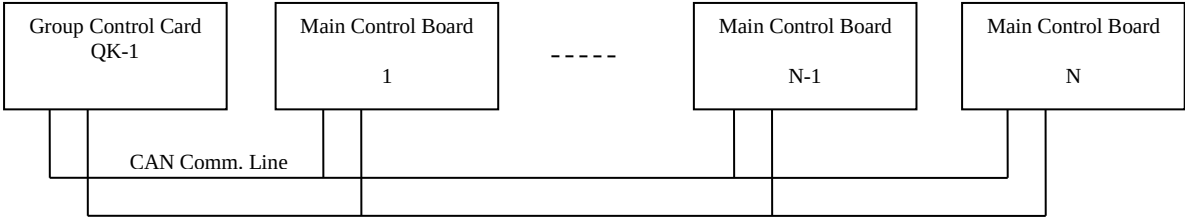

Remove

Remain